



Driver Version:	1.00
Document Revision:	3

FieldServer Driver FS-8700-32 Modbus Tek-Air

Description

The Tek-Air Modbus RTU driver allows the FieldServer to transfer data to and from Tek-Air devices over either RS-232 or RS-485 using the Enhanced Tek-Air Modbus RTU protocol. Modbus_Tekair is the same as Modbus_RTU, except that it has the ability to concentrate the bytes of data in the packet to create floating point values. The order in which the bytes are combined and the address range used was developed specifically for the Tek-Air/Modbus interface. To accommodate this, the driver must be configured to poll using odd numbered addresses as two integer registers are used for every floating point value. If this value is stored in a floating point data array, it will be retrievable in the correct format on the Server side. Note that the Tekair "Double" data type is not supported.

Fieldserver Mode	Nodes	Comments
Client	1	Only 1 client node allowed on Multidrop systems
Server	254	Actual electrical loading may reduce number of usable server nodes

Formal Driver Type

Serial
Client or Server

Connection Information


Connection type: RS-232 or RS-485 (Two wire, Half-Duplex)
Baud Rates: 300; 600; 1200; 2400; 4800; 9600; 19200; 28800; 38400 Baud
Data Bits: 7,8
Stop Bits: 1,2
Parity: Odd, Even, None
Multidrop Capability Yes

Devices tested

Device	Tested (FACTORY, SITE)
SmartLab Controller	Site



Connection configurations

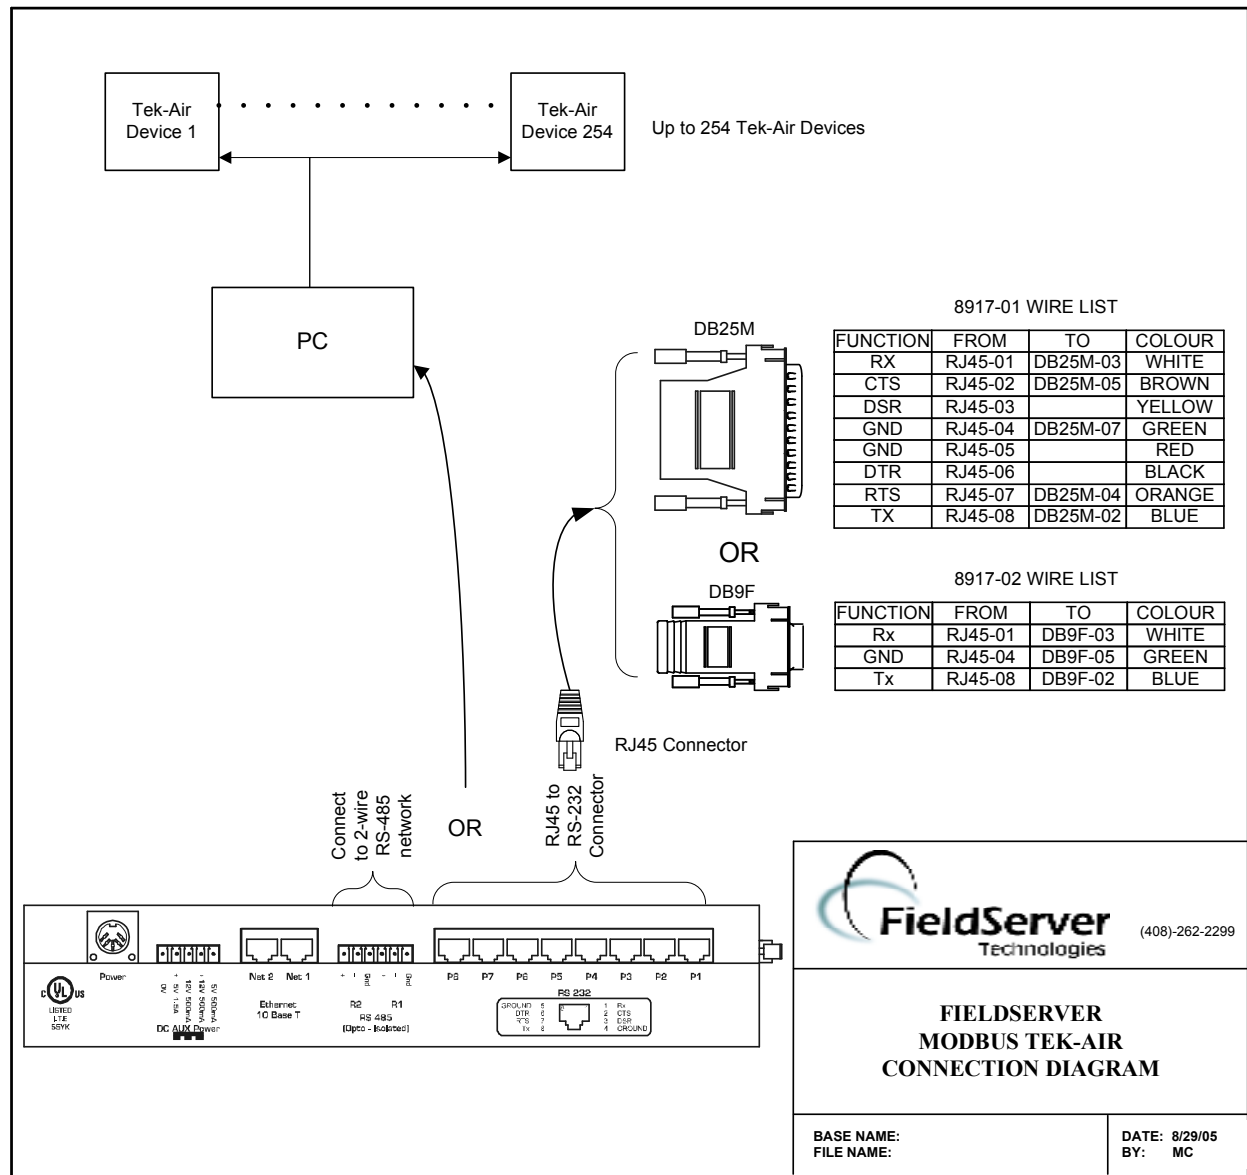

Connection Notes

The actual amount of stations on a network may be limited due to electrical loading limitations.



Communications functions - Supported functions at a glance:

Data Types Supported

FieldServer Data Type	Description (or Device Data Type)
Analog Input	Analog Input Registers
Digital Input	Discrete Input Registers
Analog Register	Input and Output Registers
Digital Register	Input and Output Registers
Analog Output	Analog Output Registers
Digital Output	Discrete Output Registers

Read and Write Operations supported

FieldServer as a Client	FieldServer as a Server
Read Analog Status:	Provide Analog Status:
Read Output Registers (4xxxx) Read Input Registers (3xxxx)	Provide Output Registers (4xxxx) Provide Input Registers (3xxxx)
Read Binary Status:	Provide Binary Status:
Read Discrete Output Status (0xxxx) Read Discrete Input Status (1xxxx)	Provide Discrete Output Status (0xxxx) Provide Discrete Input Status (1xxxx)
Write Analog Setpoints:	Accept Analog Setpoints:
Preset Single Register (4xxxx) Preset Multiple Registers (4xxxx)	Accept Preset Single Register (4xxxx) Accept Preset Multiple Registers (4xxxx)
Write Binary Commands:	Accept Binary Commands:
Force Single Coil (0xxxx) Force Multiple Coils (0xxxx)	Accept Force Single Coil (0xxxx) Accept Force Multiple Coils (0xxxx)

Unsupported Functions and Data Types

Function	Reason
Programming messages	FieldServer is a data transfer device, and as such, programming messages are not required

Unsupported Devices or Protocol Options

Device	Details
TBD	TBD



Protocol Driver



A Sierra Mobile Company

THIS PAGE INTENTIONALLY LEFT BLANK